


1

PREPARE MOUNTING TEMPLATE

Wall mounting template. Don't discard during unboxing process.


Unfold template from its shipping configuration.

Fold bottom flap and side flaps along bend lines. Then tuck triangular flap behind and insert into vertical slot opening at each end.

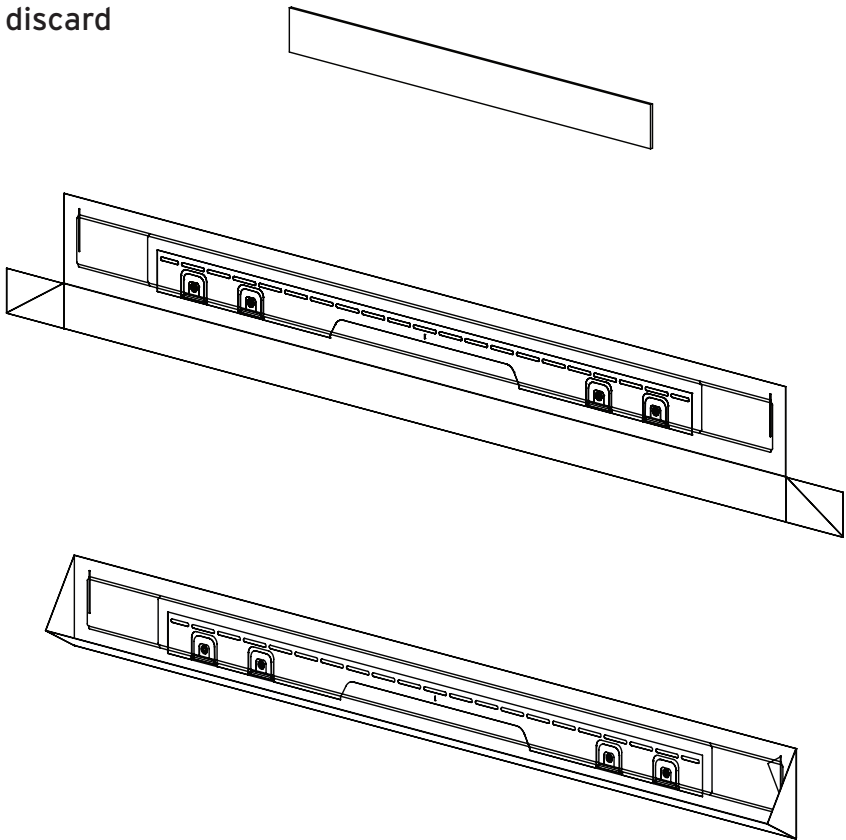


2

MOUNTING TEMPLATE

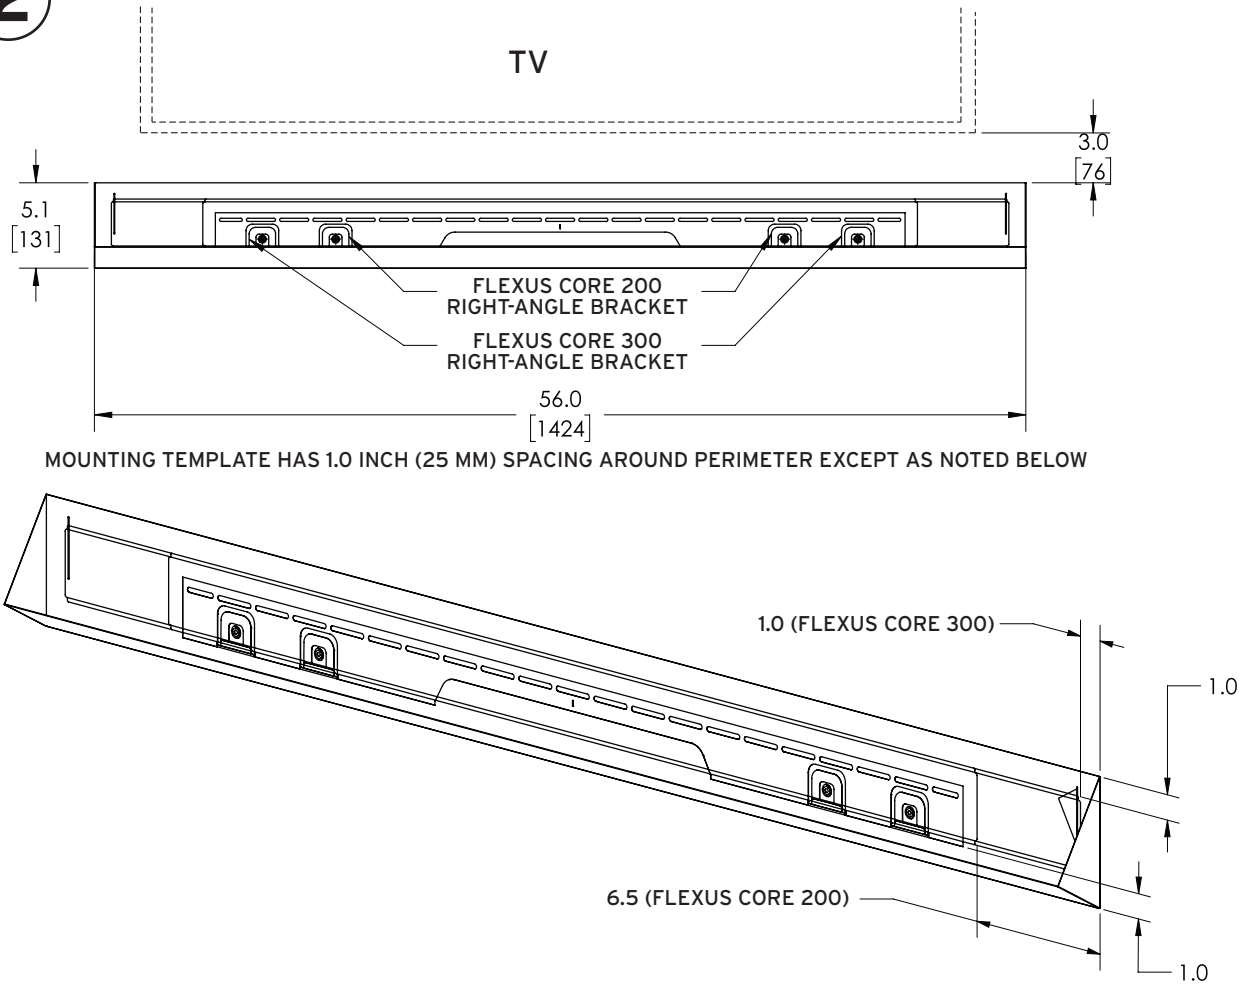

3


ATTACHMENT TO WALL DETAILS

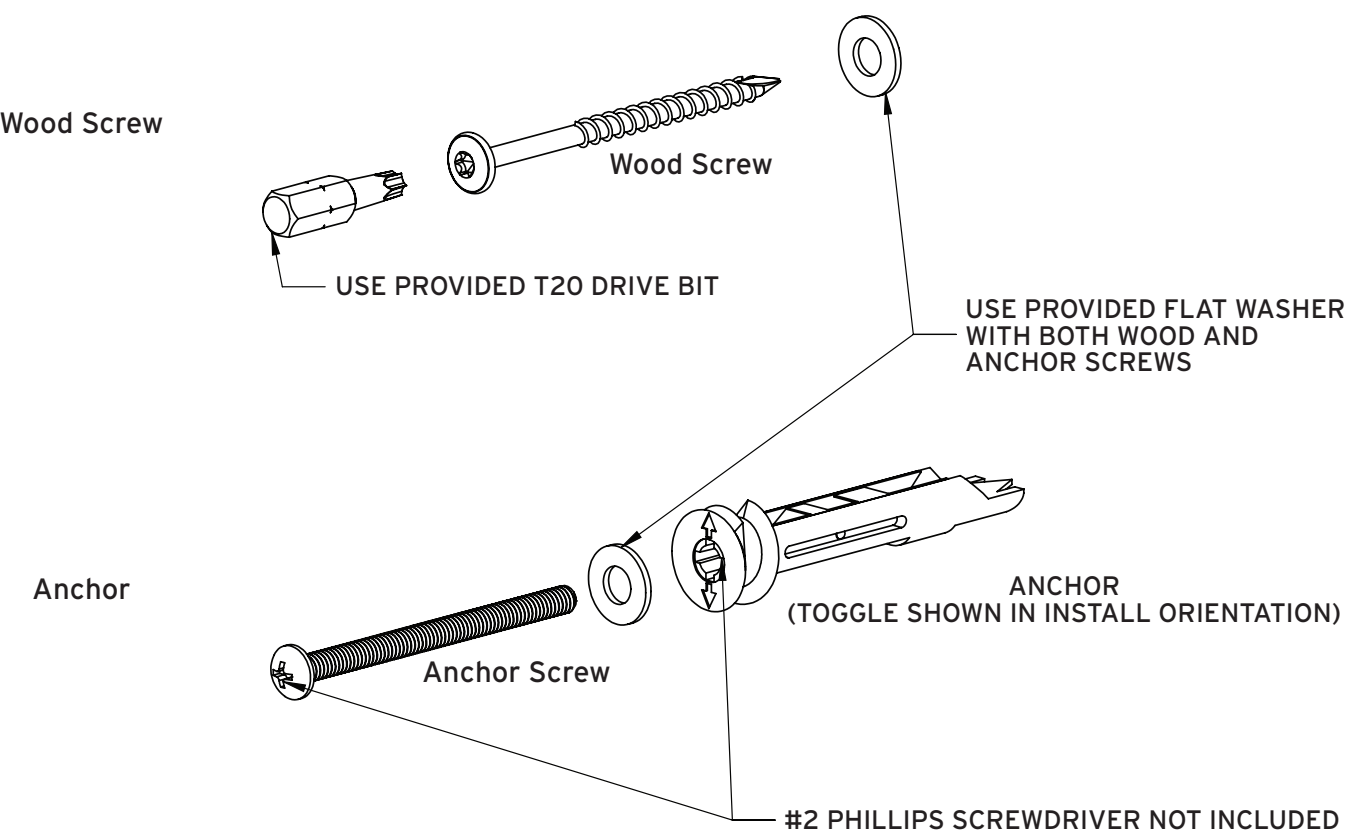



Screws	Pre Drill	16" Stud Wood Spacing		24" Stud Wood Spacing		Concrete, Brick, or Plaster
		Centered	Not Centered	Centered	Not Centered	
Wood Screws	See Note 1	3	2	1	2	NO
Wall Anchor & Anchor Screw	See Note 2	0	2	2	2	NO
Total Screws		3	4	3	4	Use a minimum of 3 fasteners (not included)
Note 1	Keep mounting template against wall. Use a 1/8" (3mm) drill bit and drill through template, drywall, and into stud. Total pre drill depth 2~2.5 inches.					
Note 2	Mark screw location with sharp object by piercing template. Move folded template below and tape to wall to help catch drywall debris. Use a #2 Phillips screwdriver, press anchor tip slightly into drywall. Apply pressure, turn anchor until flush with drywall and arrows on head of anchor point up and down.					
Note 3	<p>FLEXUS CORE 200 MUST USE ONE OF THESE FIVE SLOT OPENINGS WHEN MARKING SCREW LOCATIONS ON WALL PER EACH SIDE.</p> <p>Mounting Template</p> <p>FLEXUS CORE 300 MUST USE ONE OF THESE THREE SLOT OPENINGS WHEN MARKING SCREW LOCATIONS ON WALL PER EACH SIDE.</p>					

4

FLEXUS CORE 300 RIGHT-ANGLE BRACKET LOCATIONS




FLEXUS CORE 200 RIGHT-ANGLE BRACKET LOCATIONS

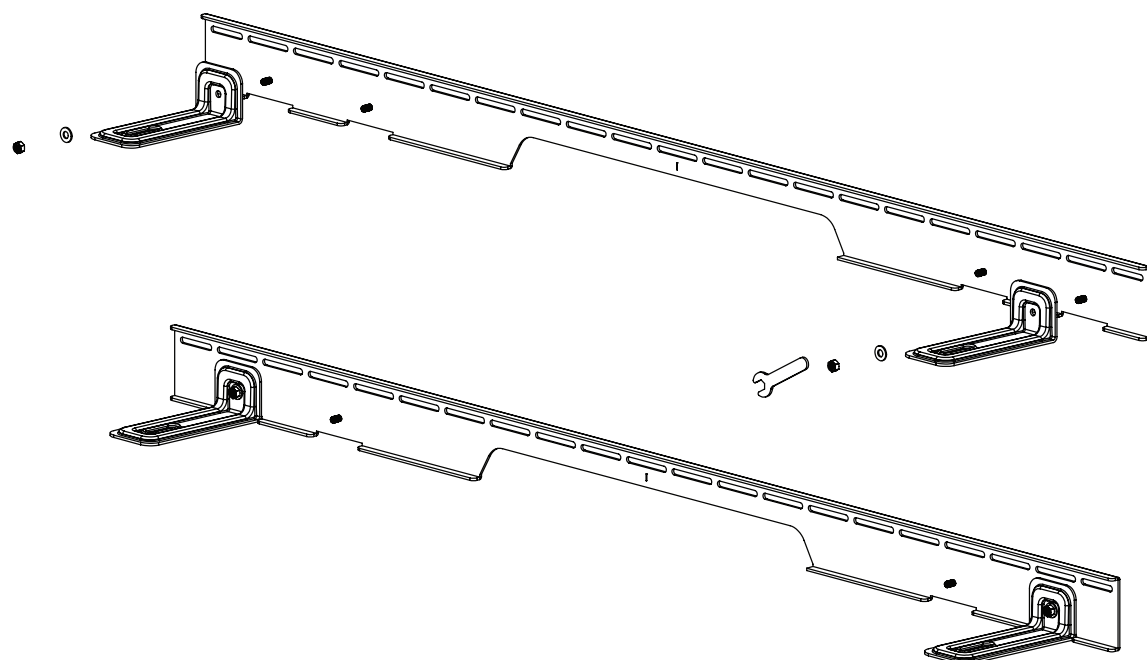

5

ATTACH WALL BRACKET ASSEMBLY TO WALL

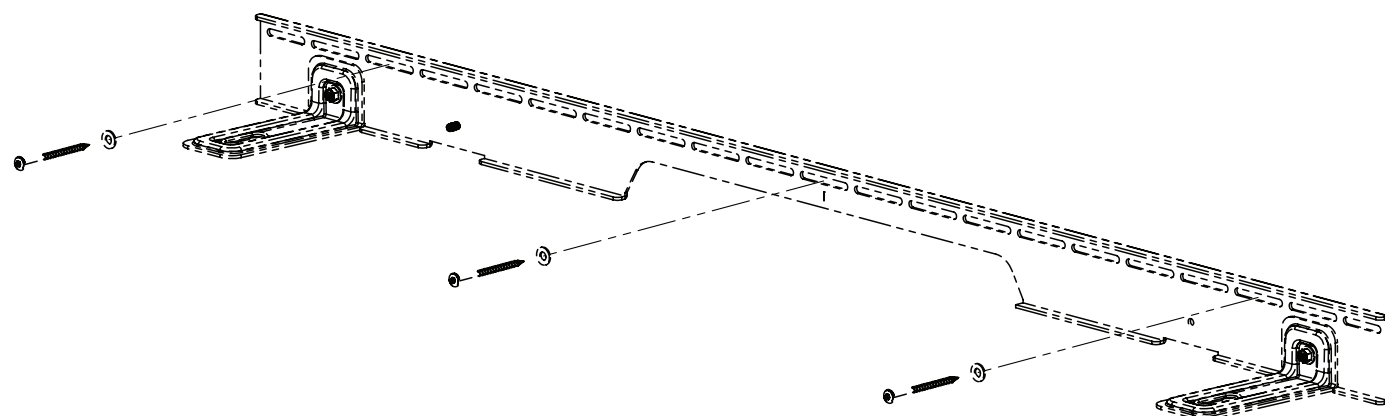


INSTALL AND TIGHTEN APPROPRIATE SCREWS USING PROVIDED FLAT WASHERS.

- THREE WOOD SCREWS ARE SHOWN ABOVE WHICH ARE NOT APPLICABLE TO ALL INSTALLATION SCENARIOS.
- SCREW TYPE AND TOTAL QUANTITY ARE DEPENDENT UPON WOOD STUD SPACING.
- DO NOT OVERTIGHTEN SCREWS.
- A MINIMUM OF THREE SCREWS IS REQUIRED.

6

- 1) ATTACH POWER CORDS AND OTHER APPLICABLE CABLES TO SOUNDBAR
- 2) ATTACH SOUNDBAR TO WALL BRACKET ASSEMBLY AS SHOWN HERE:

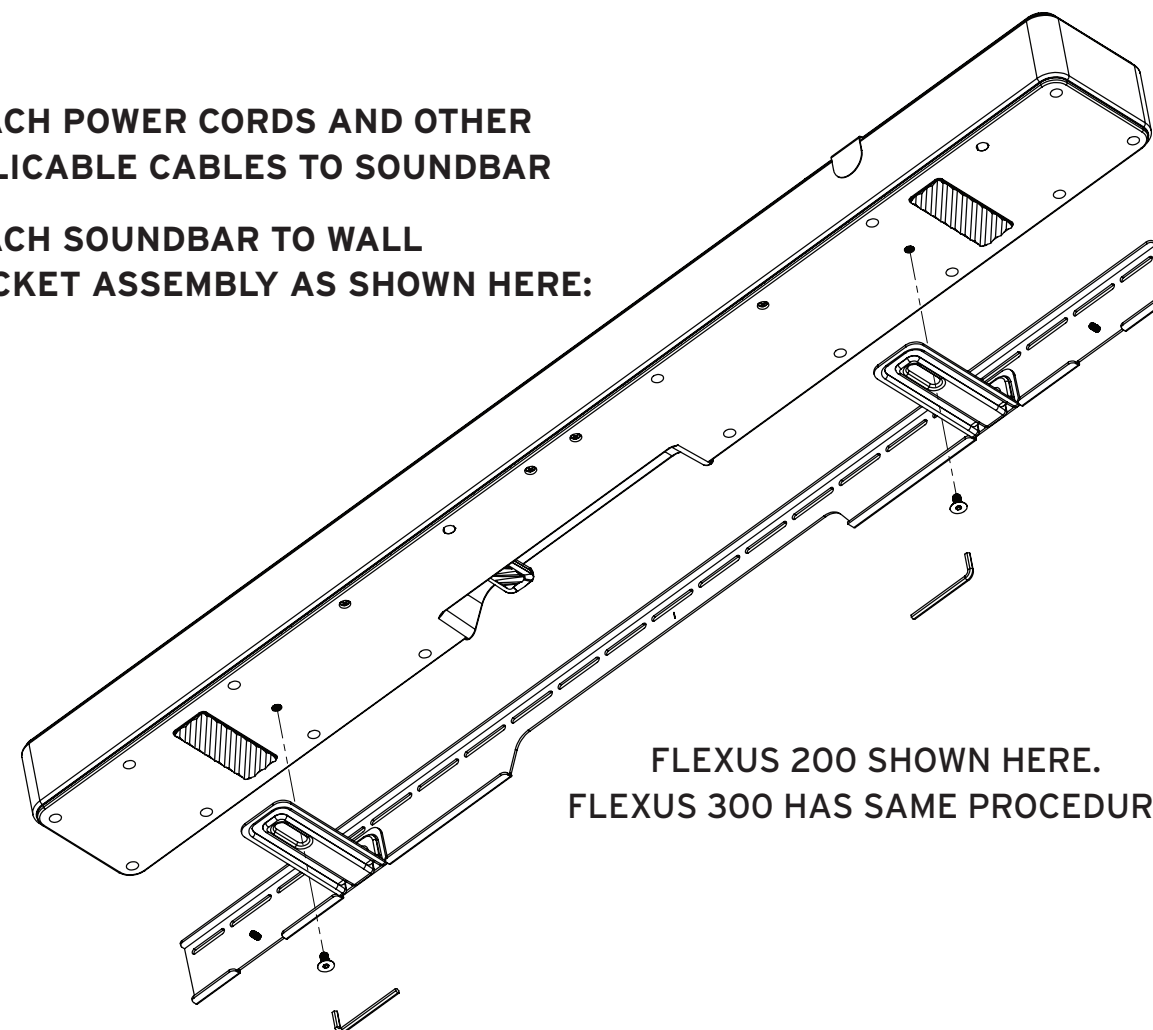

FLEXUS 200 SHOWN HERE.
FLEXUS 300 HAS SAME PROCEDURE.

Klipsch®

KEEPERS OF THE SOUND™

3502 WOODVIEW TRACE, INDIANAPOLIS, IN, USA

KLIPSCH.COM

©2024, Klipsch Group, Inc. Klipsch Group, Inc. is a wholly-owned subsidiary of Vox International Corporation. Klipsch and Keepers of the Sound are trademarks of Klipsch Group, Inc., registered in the United States and other countries. The Bluetooth® word mark is a registered trademark owned by Bluetooth SIG, Inc. and any use of such mark by Klipsch Group, Inc. is under license.

V01 - 241002